

	OL.	
Overcast With Your	OL.	
Image: Constrained and Constrained	OL	
CL C CL		
Battery stotus Full Mode sale Hers: Higarion 2000/000 At the J	and a second	
Battery stotus Full Mode sole Hest ingenion 2000/000 At the I	terrent and the second s	
Bathery status: Full Mode ade Hext: Prijetice 2000/0000 AM 12:00		
Battery status: Fell Mode side Next inguition 2000/00/00 AM 12:00		
Battery status: Fell Mode side Next inguition 2000/00/00 AM 12:00		1
Made tale Hert Higation 2000(00000 AM 1200		
Next impation 2000/00/00 AX12200 At the I	tus: Full	
▲ 单 ④ ⑤ 匾 ⋒ 8 At the l	ide	
		At the b
Parameter Lingation control Plan Service My	entrol (Han Senadi My	Parame
ter finishing the connection, all the paired devices will be displayed	ateway socket's po	
	de	gation control (Plan Sense) My



		<	Help
ner	20	Cause of	Sharing Failur
		Zigbee, Blue only be shar	tooth mesh, and ir ed through the gat
	20	Sharing M	lethod
ion	2	We recomme	nt resident in your ind you set the acc share all your hon
	2	Add Home M	ember
	>		
	5		
Device			
ry Defaults			



and a variety		1.000			
evice condition,		Cancel Edit	Save	Canual Creat new Smort	Love .
I to the data		Condition Any Condition to Mat	0	Condition Are Condition to Met	•
		Temperature : Greater th	an 20°C	Temperature +30°C	
		Weather: Savry		Weather : Surry	
× .		Harmidity : Dry		Standard : Day Sign	
10		Sol resilure +60%		Task	0
×				Select Condition Type	
		Task	•	All Conditions Are Met	
		Center De	8	Any Condition to Met	
		will Water Timer		Cancel	
	6	Select Task		< Select Notification Met	88
met or all				< senection canon men	
		aunch Tap to Run			hod Next
		-		Message Center	of Next
rrent	E	nable or Disable Automation		Message Canter	bod Next
rrent	E	end Notification		Menage Cantar	ood Neot
rrent	E	end Notification		Message Cantar	
rrent	E	end Notification		Message Conter	od Next
rrent	E	end Notification		Message Conter	lood Next
rrent	E	end Notification		Message Conter	bol Next
rrent	E	end Notification		Message Center	od Next
rrent	E	end Notification		Message Center	od Next
rrent	E	end Notification		Message Center	iod Next
14	E	end Notification		Message Center	1

After finishing setting, icons will be found under Tap-to-Run and Automation. The button on the right can enable or disenable the Automation plan. The Tap-to-Run function connects different plans and devices at the same time to enable "One-Click Management".



Tips and Warnings

- 5.1. Please make sure the smart phone is near the Wi-Fi water timer when connecting or setting the watering plan. The best range for operation or connection is within 60 meters in the open area.
- 5.2. The watering timer will follow and perform the preset watering schedule after application set successfully, even if the phone is out off the best Connecting range.
- 5.3. LED light meaning: a. White and rapidly blink: ready for pairing to smart phone;

- b. White and slowly flash: searching the connecting gateway; c. Red and blink every 6 seconds: low batteries power warning; d. Red and breathing light blink: water leaking when turn off the water timer;
- e. Red when searching a sensor: does not find the sensor.

Warranty & Warning

WARRANTY

The warranty aims for the problem of non-artificial damage and provides a one-year warranty from the date of leaving the factory.

WARNING

- 1. Under freezing temperatures, timers should be removed from the faucet and stored indoors to avoid potential freezing damage.
- 2. Please clean filters regularly and replace if it is worn in order to prolong life of timer.

Basic Parameter of the device

- TECHNICAL PARAMETER
- 1"BSP or 3/4" NH inlet
- 3/4"outlet thread • Working pressure: 0.5 bar to 8 bar(10PSI-120PSI)
- Max flow: 5L/min to 35L/min
- Water proof: IP54
- Working temperature: 0°C to 50°C (37°F-122°F) Battery life: over one year
- WiFi timer power by 4 AA batteries, WiFi gateway power by AC power





Interval(M:S) 05:00